Timing Belt

Illustrated Index

NOTE:

- Refer to page 5-45 for positioning crank and pulley before installing belt.
- Refer to base manual for altermator belt adjustment.
- Refer to page 5-20 for A/C compressor belt adjustment.
- Mark direction of rotation before removing.

