## **Shift Fork Shaft Assembly**



## Disassembly/Reassembly NOTE: When assembling, install the shift fork shaft with its detents facing the hole where the balls are inserted. Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact parts. 1st/2nd SHIFT FORK SHAFT 5th/REVERSE SHIFT **FORK SHAFT** 5th SHIFT FORK 3rd/4th 1st/2nd SHIFT FORK SHIFT FORK 5th/REVERSE 5 mm SPRING PIN SHIFT PIECE PIN DRIVER, 5.0 mm 07744 - 0010400